


Parts needed to mount the DP fastener

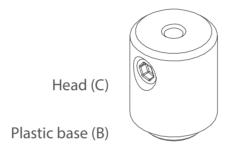

Plastic screw (A)



Tools needed for mounting:

- drill
- Allen wrench

NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu/uk.



1. Drill a hole with a diameter of 5 mm in the selected extrusion. **2.** Bevel the hole so that the plastic screw head fits in. Fi 5 mm ${f 3.}$ Mount the plastic screw (A), on the top of it mount the assembled plastic 4. Mount the LED strip. base (B) and head (C). **5.** Insert the rod into the mounting bracket of the head. Block the rod by $\textbf{6.} \ \mathsf{Suspend} \ \mathsf{the} \ \mathsf{lighting} \ \mathsf{fixture} \ \mathsf{using} \ \mathsf{a} \ \mathsf{chosen} \ \mathsf{system}.$ tightening the pressure screw in the head with the Allen wrench.